




Master Controller 20 channel

TRSX-MC20

Remote Control Layout

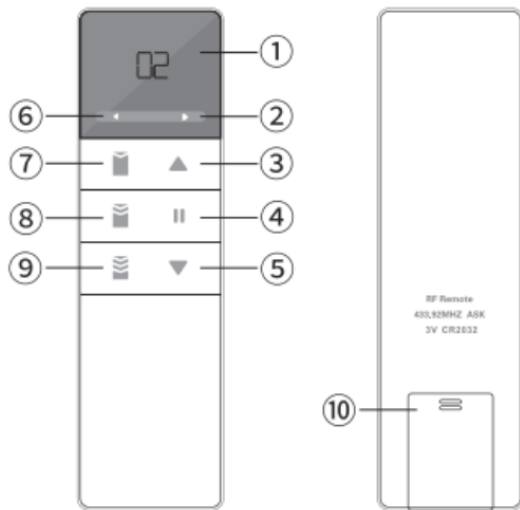

1. LED light
2. Channel Select UP
3. GO
4. STOP
5. BACK
6. Channel Select DOWN
7. 75% length
8. 50% length
9. 25% length
10. Battery Cover/Controller Reset Switch


The TRSX-MC20 Master Controller allows the control of up to 20 individual lanes.

Features


1. 8 front buttons: 2 for Channel election, and 6 for Go, Back, Stop, and 3 intermediate stopping points user-programmable
2. Allows the setup of range limits so the carrier will self-stop at the pre-determined limits, without hitting the end of the rail
3. 3 intermediate stopping points, user-programmable

Functions


1. **Pairing/Unpairing the Controller**
 - a. **Press and hold for 3s the Reset button on the motor (RED light comes ON)**
 - b. Select the desired channel on the controller (1 to 20)

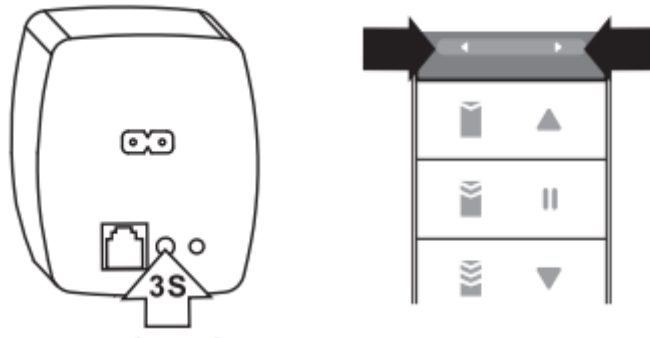

- c. Press the Reset button on the controller (remove the battery cover, press the one on the left side) (motor RED light blinks)

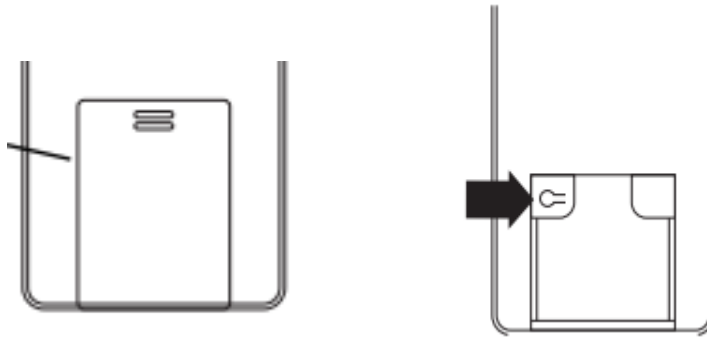


- d. Press the motor Reset button to confirm, 1 more time. RED light stops blinking.

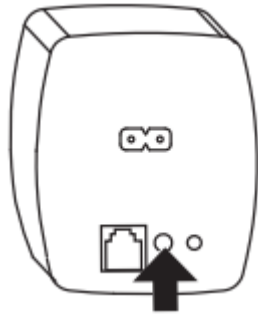

- e. To unpair, Press and Hold the motor Reset button for 3s until RED light comes ON, then release the button and press again for 7s.

Attention: This process will clear all memory and also clears all limits.

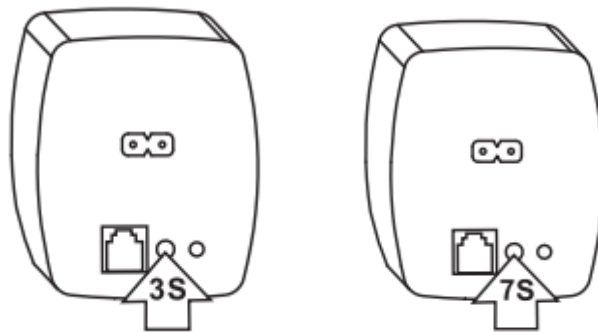

2. Setting the Limits

- a. Clear the motor of potential pre-existing limits by Press & Hold the Reset and Stop buttons for 5s. Motor will vibrate at the end of 5s period.

